




# The HUNCHBACK OF NOTRE DAME



## NOTE: For Kit No. 481

THIS MONSTER KIT INCLUDES PARTS MOLDED IN "FRIGHTENING" LIGHT-ASSEMBLING, TAKE ALL PARTS INTO A DARKENED ROOM OR CLOSED TO DETERMINE WHICH FEATURES TO PAINT AND WHICH TO LEAVE WITH GHOULISH GLOW POWER.

FOR SUGGESTED DETAIL PAINTING SCHEME — SEE ILLUSTRATIONS. Paint parts as indicated and allow to dry before assembling.

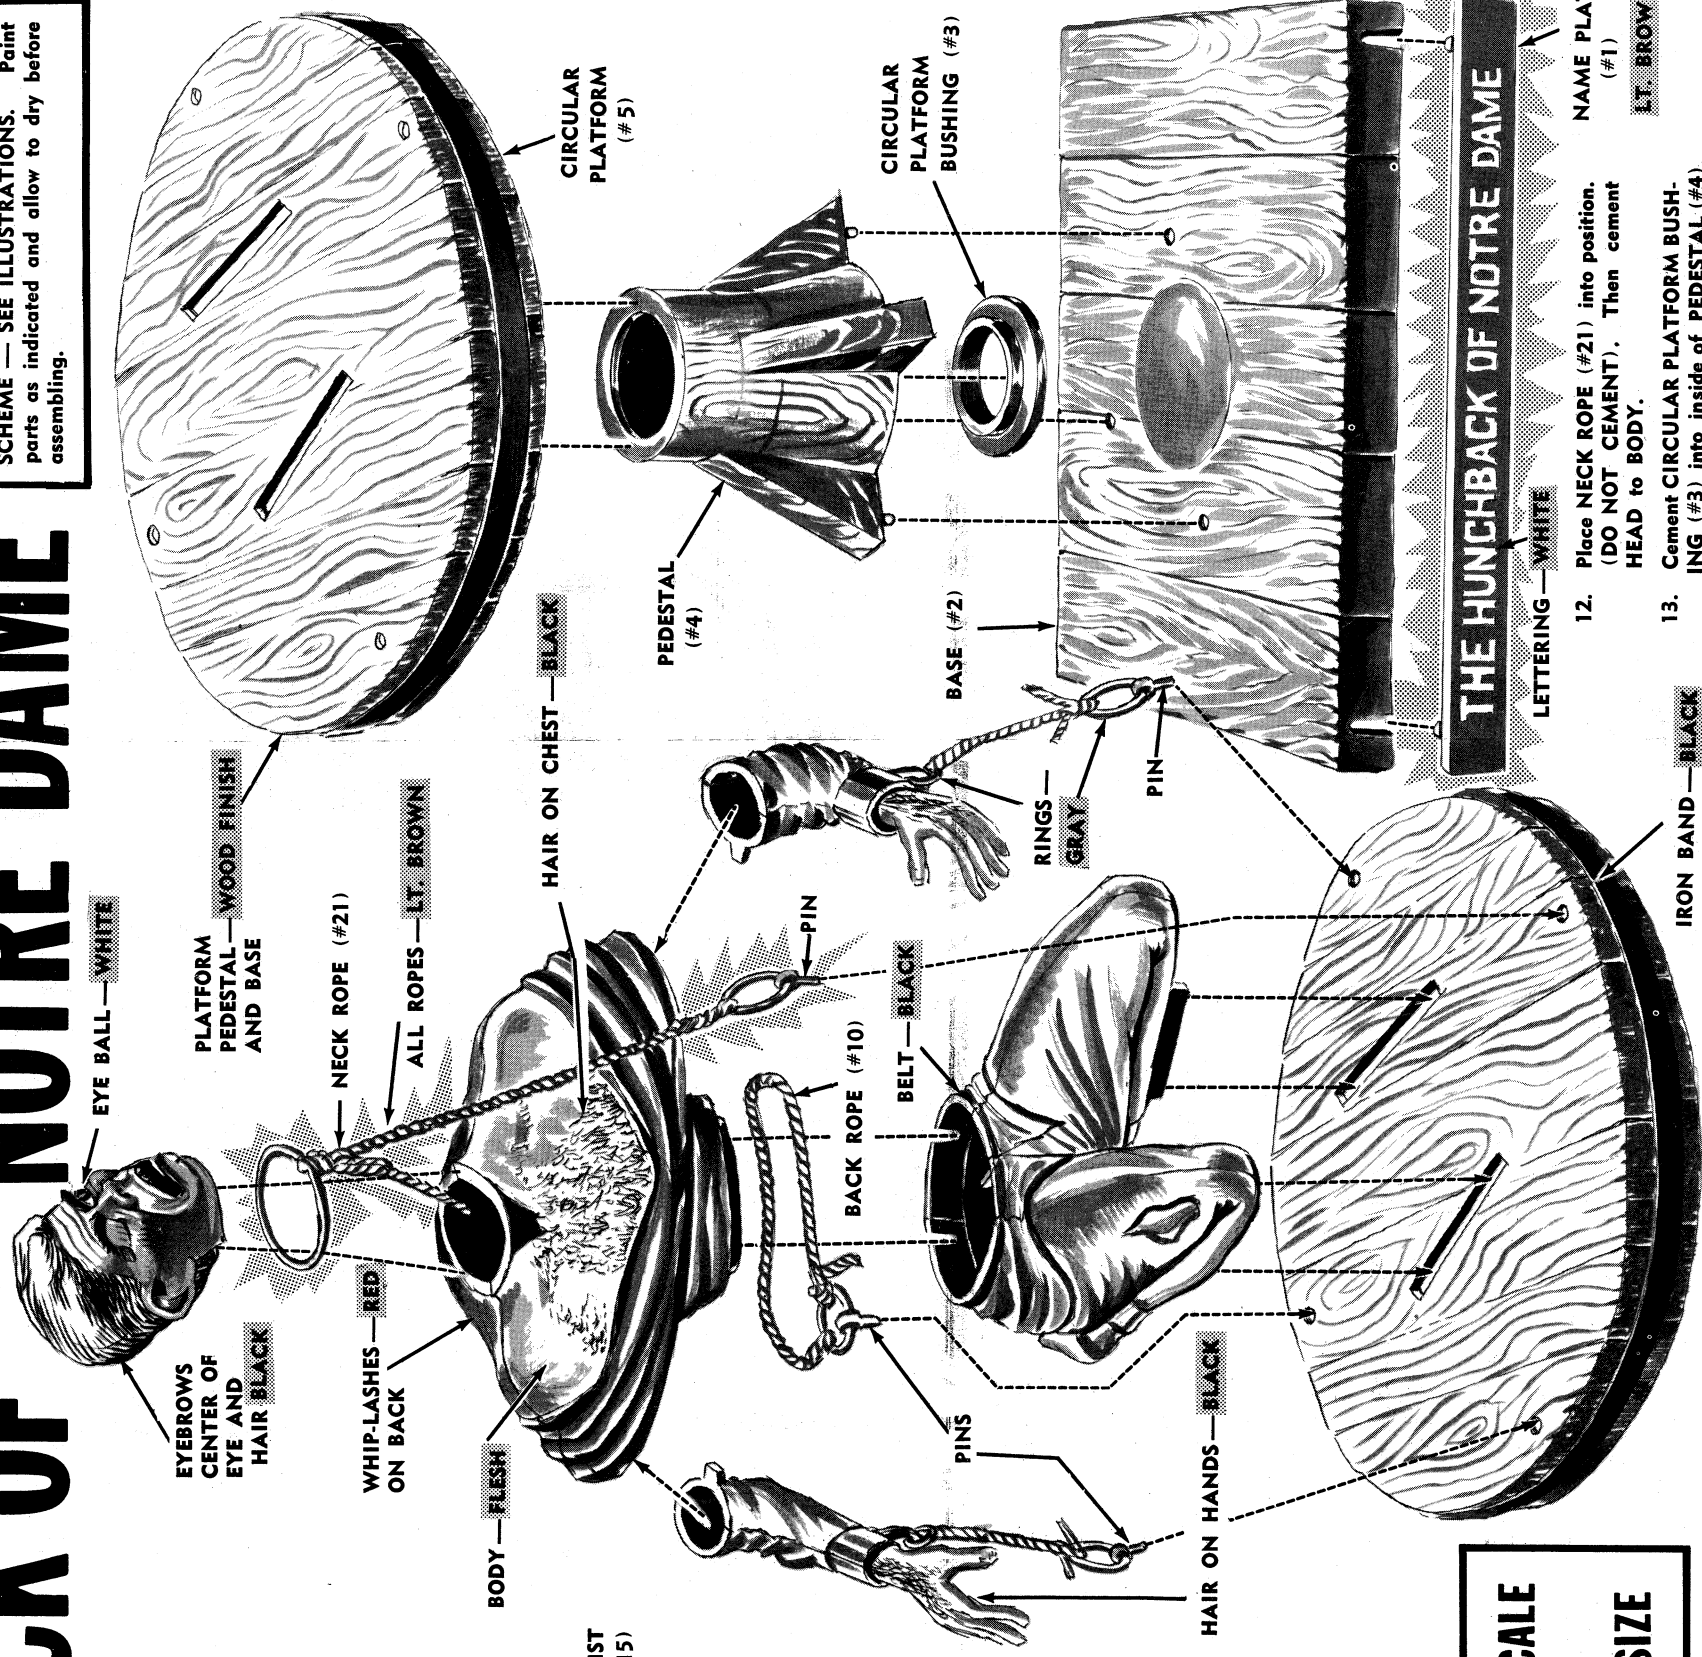


MODEL SCALE  
1/8  
ACTUAL SIZE

2

- Cement FOREARMS to BODY. Allow to dry.
- Cement ASSEMBLED LEG SECTIONS to CIRCULAR PLATFORM (#5).
- Slip BACK ROPE (#10) over LEG SECTIONS at waist. (DO NOT CEMENT). Then cement BODY to LEG SECTIONS.

- Place NECK ROPE (#21) into position. (DO NOT CEMENT). Then cement HEAD to BODY.
- Cement CIRCULAR PLATFORM BUSHING (#3) into inside of PEDESTAL (#4). Allow to dry.
- Cement PINS of LARGE ROPE RINGS into HOLES in CIRCULAR PLATFORM.
- Cement PEDESTAL to BASE (#2).
- Cement NAME PLATE (#1) to BASE.
- Place CIRCULAR PLATFORM on PEDESTAL. (DO NOT CEMENT).

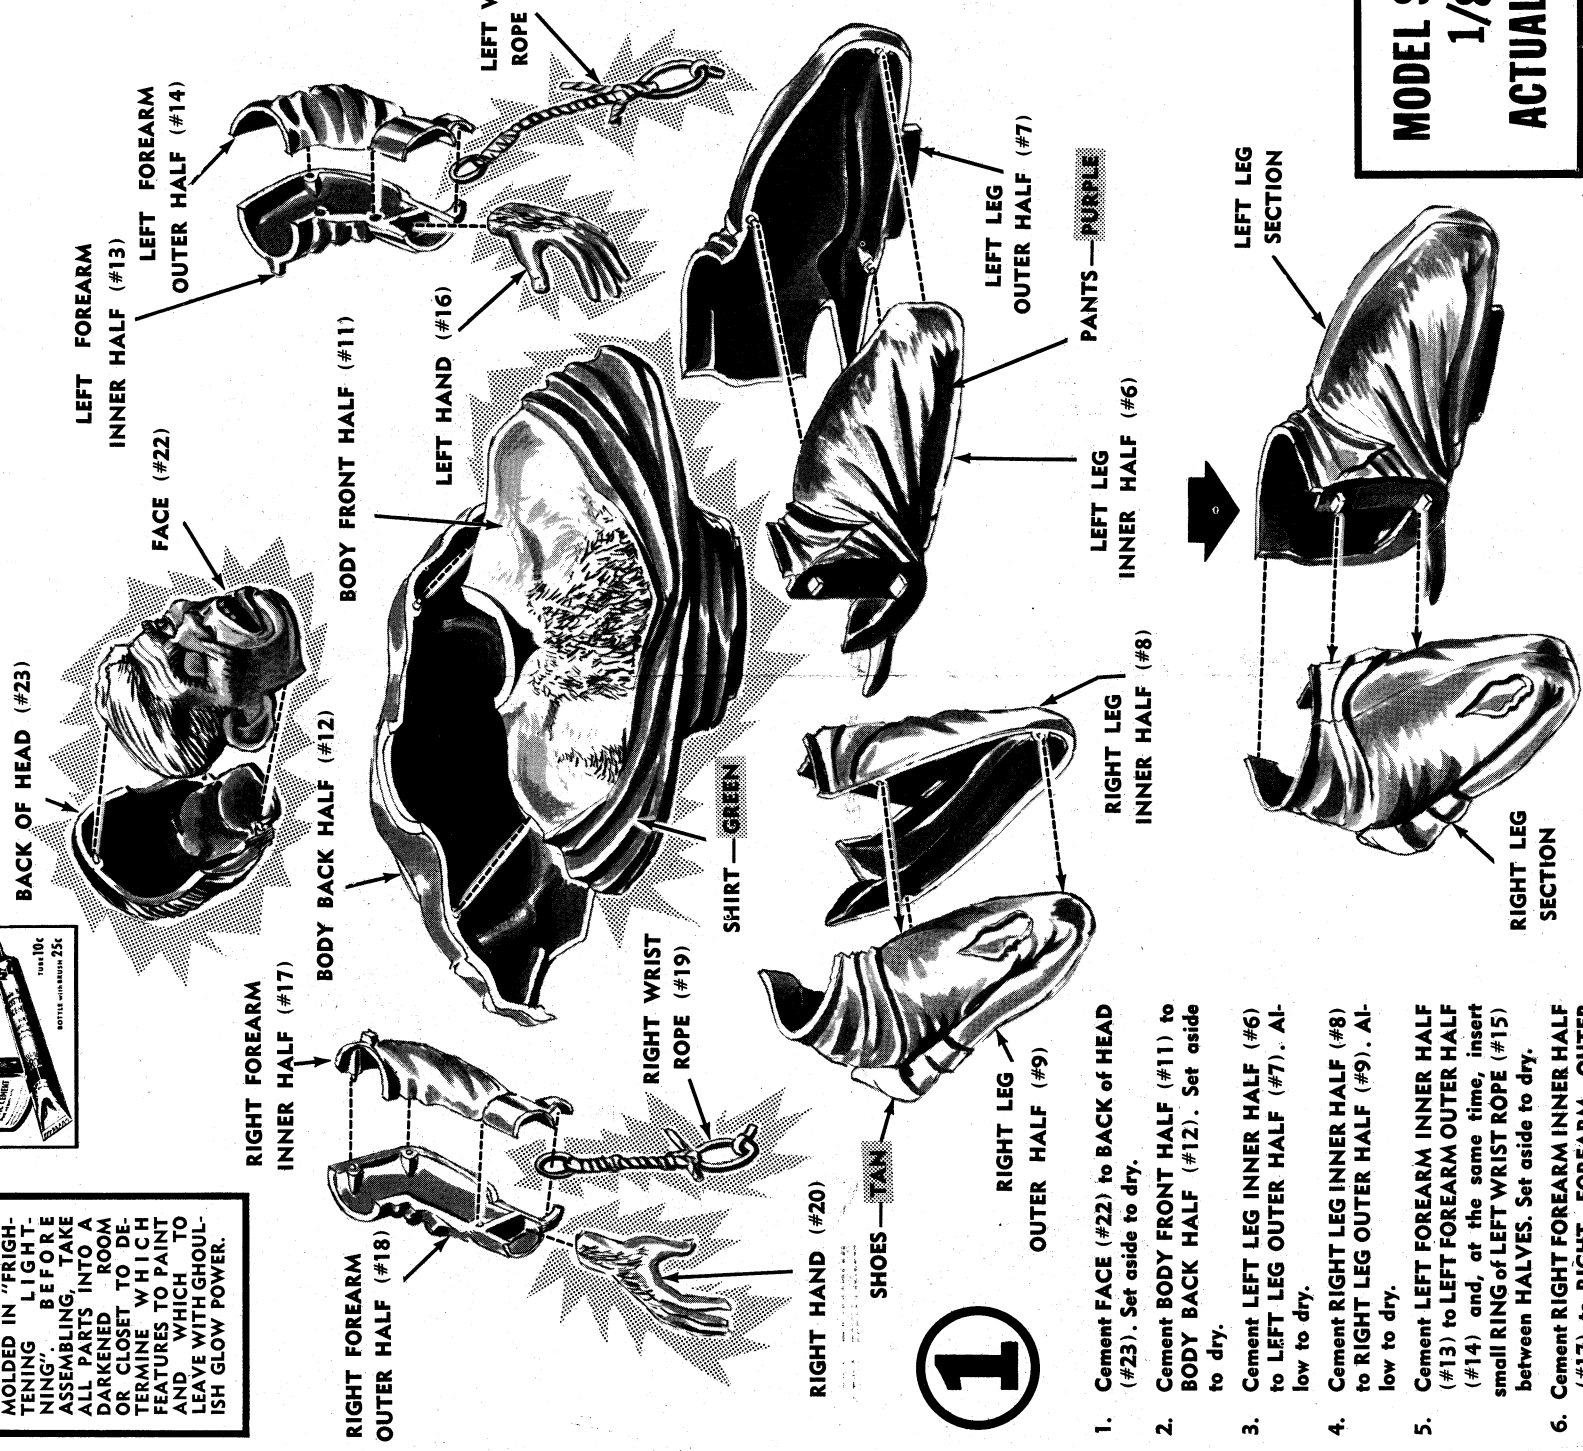

1

- Cement FACE (#22) to BACK of HEAD (#23). Set aside to dry.
- Cement BODY FRONT HALF (#11) to BODY BACK HALF (#12). Set aside to dry.
- Cement LEFT LEG INNER HALF (#6) to LEFT LEG OUTER HALF (#7). Allow to dry.
- Cement RIGHT LEG INNER HALF (#8) to RIGHT LEG OUTER HALF (#9). Allow to dry.
- Cement LEFT FOREARM INNER HALF (#13) to LEFT FOREARM OUTER HALF (#14) and, at the same time, insert small RING of LEFT WRIST ROPE (#15) between HALVES. Set aside to dry.
- Cement RIGHT FOREARM INNER HALF (#17) to RIGHT FOREARM OUTER HALF (#18) and, at the same time, insert small RING of RIGHT WRIST ROPE (#19) between HALVES. Set aside to dry.
- Cement LEFT HAND (#16) and RIGHT HAND (#20) to FOREARMS. Allow to dry.
- Cement LEFT LEG SECTION to RIGHT LEG SECTION. Allow to dry.

NOTE: For further painting detail refer to illustration on top of package.