

INSTRUCTIONS FOR ASSEMBLING
ROBIN
 THE WONDER BOY

488

© 1966 BY NATIONAL PERIODICAL PUBLICATIONS, INC.
 and AURORA PLASTICS CORP.

IMPORTANT - READ THIS FIRST!

AURORA


Before assembling model, study sketch carefully.

Important—Apply cement to inside surfaces only. Avoid getting cement on outer surfaces of model sections. Use cement very sparingly and avoid getting cement on hands, so as not to mar or smear plastic surfaces.

Do not hurry. Work carefully and patiently. **Important Note:** Before proceeding to cement parts together, it is advisable to fit parts together dry (without cement) so that you may familiarize yourself with the parts and how they go together, also noting the points where cement is to be applied.

For best results assemble model exactly in the order indicated.

This kit is molded of styrene plastic—Use only Aurora's Fireproof Styrene Cement and Aurora's Speed-Dry Enamel. Assure yourself of a perfect model every time!

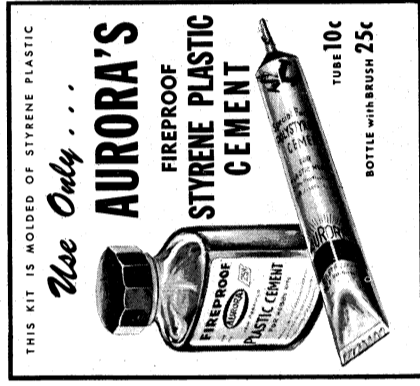

"THE ENAMEL WITH THE SPRAYED ON LOOK"



SPEED-DRY ENAMELS ARE AURORA'S REVOLUTIONARY NEW ENAMEL PAINTS developed after years of research especially for Plastic Models and other products of Wood, Metal, Glass or China.

LITHO. IN U. S. A.

MADE IN U. S. A.

©1966
AURORA PLASTICS CORP.
 West Hempstead, L. I., N. Y.

Every effort has been made to insure the completeness of this kit—however, should any part be missing, write directly to:

AURORA PLASTICS CORP.
 West Hempstead, L. I., N. Y., Dept. M

(When writing please print your NAME and ADDRESS PLAINLY.)

MODERN DAY FIGHTERS

- F8U-1 Crusader
- B-47 Stratojet
- Douglas F4D "Skyray"
- Grumman F7F "Cougar"
- B-52 Stratofortress
- Convair F107 "Dart"
- Lockheed F-104 "Starfighter"
- F-100 Super Sabre
- F-80 Corsair, bomber
- F-86 Sabrejet
- F-94C "Starfire"
- F84D Sabre Jet
- Convair V-44 "Pogo"
- Lockheed VTO
- Vertijet with Platform Trailer
- F-101 Voodoo
- North American F-107A
- F-105 Thunderchief
- Avro Arrow CF105

WORLD'S FIRST MANNED SPACE SHIP

- X-15 Sateloid Rocket Plane

GIANT BOMBERS

- B-26 Martin "Marauder"
- B-29 Superfortress
- B-25 Mitchell Bomber
- B76 "Catalina"
- B-36 "Hercules"
- Russian Nuclear Bomber

FAMOUS WARSHIPS

- Pocket Battleship Graf Spee
- Battleship U.S.S. Iowa
- Destroyer U.S.S. Halford
- Carrier U.S.S. Saratoga
- Destroyer U.S.S. Bennion
- Cruiser U.S.S. St. Paul
- Carrier U.S.S. Forrestal
- Submarine U.S.S. Sea Wolf
- Atomic Submarine S.S.N. Nautilus
- "Q" Ship Atlantis—German Raider

FAMOUS SAILING SHIPS

- Pirate Ship Black Falcon
- Chinese Junk
- Viking Ship
- Ble-Nose Schooner
- Cuffy Sloop
- Corair

FAMOUS ARMY COMBAT UNITS

- German "Panther" Tank
- Russian "Stalin" Tank
- "General Patton" Tank
- U.S. Army M8 Howitzer
- U.S. Army M4 Munitions Carrier
- U.S. Army 155 MM "Long Tom"
- U.S. Army 8" Howitzer with M8 Munitions Carrier

WHIRLYBIRDS

- Prasecki H-25A "Army Mule"
- Kaman Hawk "Egg Beater"
- Hiller Hornet "Ram Jet"
- Skorsky S-55 "Windmill"
- Prasecki H-21 "Work Horse"

POPULAR PLANES OF THE 1930's

- Boeing B 24A
- Boeing F4B
- Boeing "Hawk" PAE
- Curtiss SBC3 "Helldiver"
- M-2 "Mail Plane"

SUPER MODERN JET AIR LINERS

- Pan American Boeing 707
- TWA Boeing 707
- TU104 Russian Jet

RACING SPORT CARS

- The MG
- The Jaguar "America"
- Ferrari 342
- Ferrari Sportster
- The Cunningham

A FEW OF AURORA'S SCALE MODEL KITS
FAMOUS FIGHTERS OF WORLD WAR I

- DeHavilland Tiger Moth
- French Nieuport
- Sopwith Camel
- British Scout SE-5
- German Albatross D-3
- Fokker DR-1 Triplane
- Fokker D-7
- Spad 13
- Nieuport 28
- Platz D-3
- DeHavilland DH-4
- F2B "Britfri"
- JN-4 "Jenny" Triplane
- DeHavilland DH-10 Bomber
- Gotha Bomber

FAMOUS FIGHTERS OF WORLD WAR II

- P-38 Lockheed Lightning
- P-51 Mustang
- Curtiss P-40 Hellcat
- AT-6 Texan
- SNJ Navy Trainer
- B-17 Flying Fortress
- British Spitfire
- ME-109 Messerschmitt
- Japanese Zero
- Russian Mig-19
- Focke-Wulf


Mail this coupon and 10c for your New AURORA FULL COLOR 32 PAGE COLLECTOR'S CATALOGUE OF HOBBY KITS

AURORA PLASTICS CORP. DEPT. C
 44 Cherry Valley Rd., W. Hempstead, New York

Please rush me by return mail the new 32 page full-color AURORA HOBBY KIT CATALOGUE. I am enclosing 10c in stamps or coin.

NAME (PLEASE PRINT)
 ADDRESS
 CITY ZONE
 STATE



CONTENTS: MERCHANDISE—Postmaster: This parcel may be opened for postal inspection. Return postage guaranteed. Curt Along Line

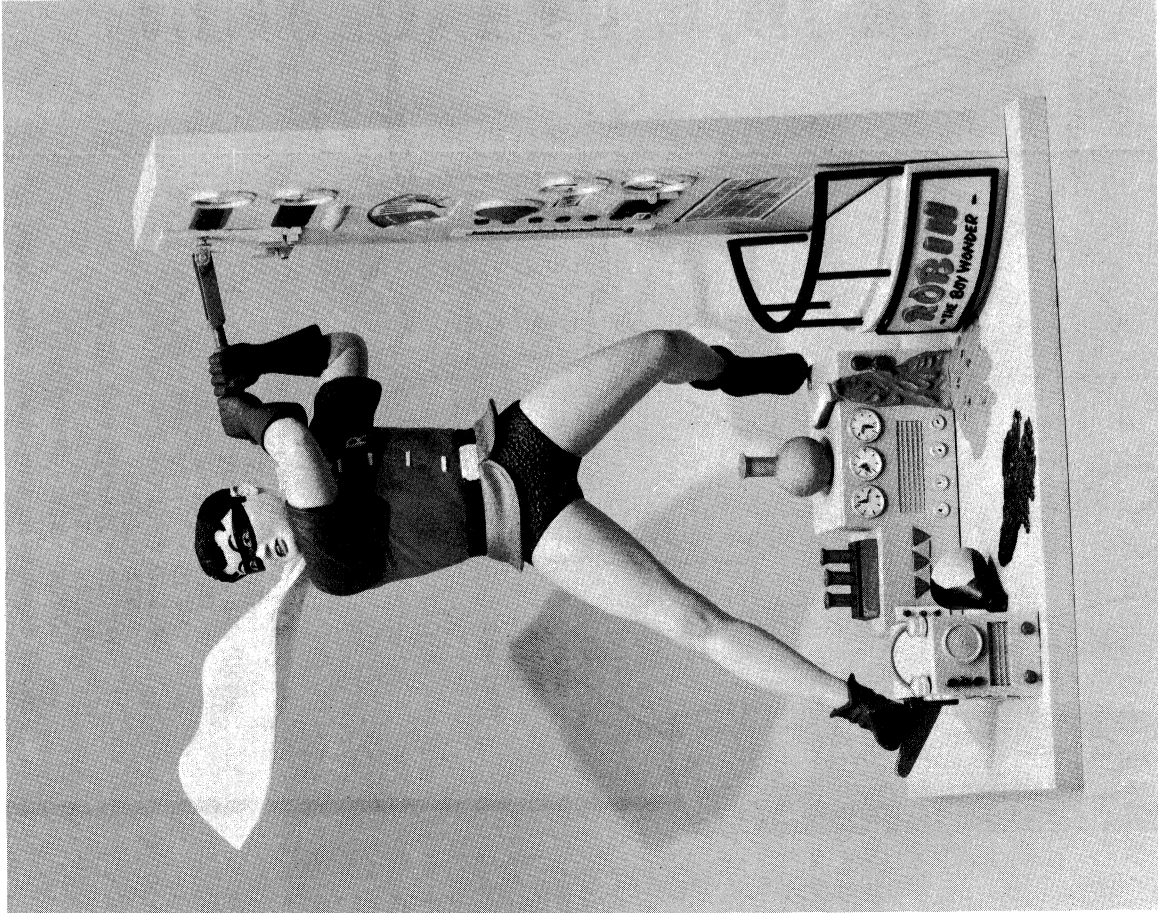

ROBIN THE WONDER BOY


FOR SUGGESTED DETAIL PAINTING SCHEME - SEE ILLUSTRATIONS. Paint parts as indicated and allow to dry before assembling.

For best results, use only AURORA'S SPEED-DRY ENAMEL - ONE COAT COVERS - DRIES IN 30 MINUTES - NO BRUSH MARKS.

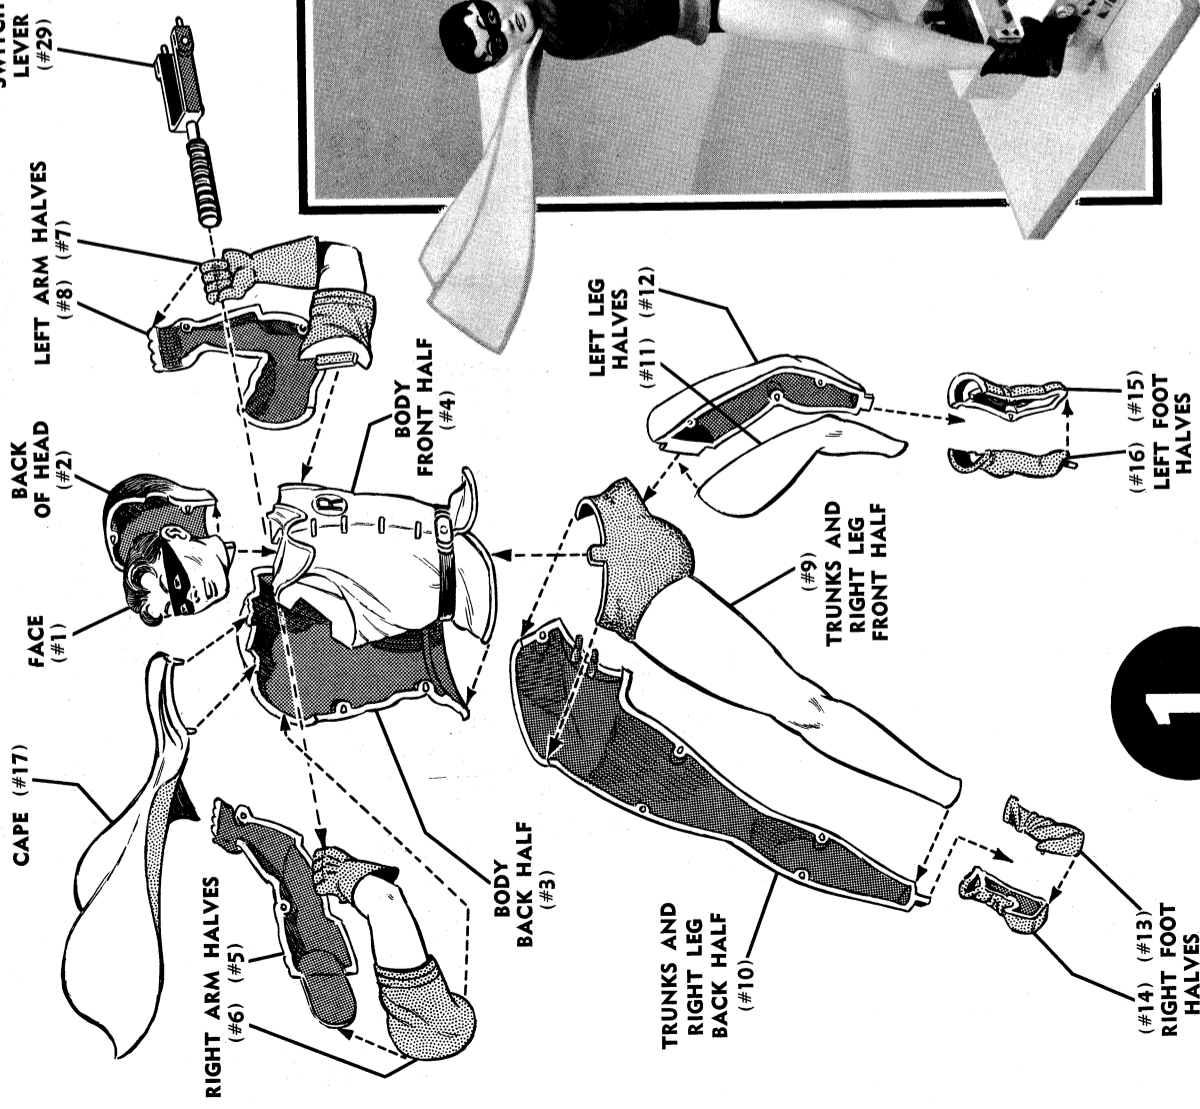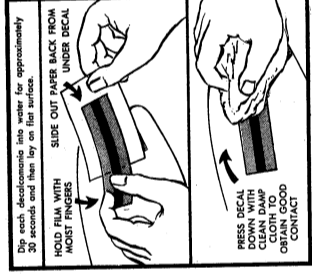

1

1. Cement BODY BACK (#3) and FRONT (#4) HALVES together.
2. Cement FACE (#1) to BACK OF HEAD (#2). Then cement assembled HEAD to BODY.
3. Cement RIGHT ARM HALVES (#5) (#6) together. Then cement assembled RIGHT ARM to BODY.
4. Cement LEFT ARM HALVES (#7) (#8) together. Then cement assembled LEFT ARM to BODY.
5. Cement TRUNKS AND RIGHT LEG FRONT (#9) and BACK (#10) HALVES together.

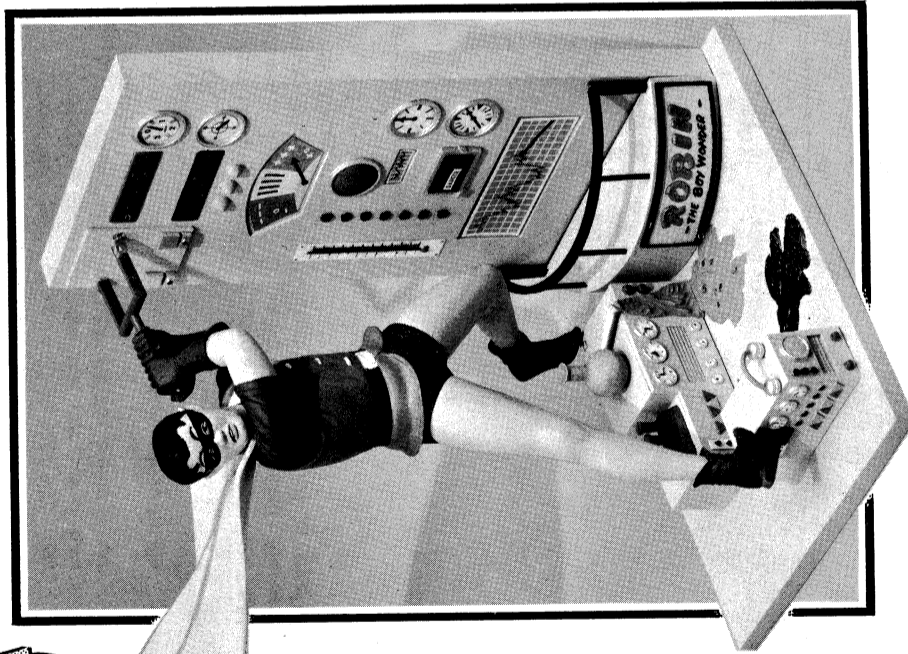

6. Cement LEFT LEG HALVES (#11) (#12) together. Then cement assembled LEFT LEG to TRUNKS.
7. Cement RIGHT FOOT HALVES (#13) (#14) together, and then cement assembled RIGHT FOOT to RIGHT LEG.
8. Cement LEFT FOOT HALVES (#15) (#16) together, then cement assembled LEFT FOOT to LEFT LEG.
9. Cement the two pins in CAPE (#17) into holes in ROBIN'S shoulders.
10. Push SWITCH LEVER ARM (#29) through LEFT and RIGHT HANDS. (Do not cement so SWITCH LEVER can be adjusted to fit CONTROL PANEL BOARD later on.)

2

11. Cement SMALL ELECTRICAL SWITCH BOX SECTIONS (#25) (#26) (#27) (#28) together. Then cement BOX over small rectangular raised rib section on BASE (#18).
12. Cement FOOT LEVER (#31) and HIGH VOLTAGE LOOP (#30) to assembled SWITCH BOX.
13. Cement FLASK HALVES (#35) (#36) together. Then cement FLASK to BASE.
14. Cement BOX FRONT PANEL (#24) to LARGE ELECTRONIC BOX (#23), and then cement assembled BOX over opening in BASE.
15. Cement TEST TUBES (#32) (#34) into TEST TUBE RACK.
16. Cement LABORATORY BOTTLE HALVES (#37) (#38) together. Then cement BOTTLE to BOX.
17. Cement pins on TEST TUBE (#33) into corresponding holes in BOX.
18. Cement NAME PLATE (#22) to slot in GUARD RAIL SECTION (#20). Then cement GUARD RAIL SECTION to CONTROL PANEL BOARD (#19).
19. Cement PLATFORM (#21) down onto ribs of CONTROL PANEL BOARD and GUARD RAIL SECTION.
20. Cement assembled CONTROL PANEL BOARD to BASE.
21. There are NINE INSTRUMENT PANEL DECALS to be applied to the CONTROL PANEL BOARD. Cut out DECAL sections and adhere in positions shown in photograph of completed model.

PHOTO SHOWS DECALS IN POSITION ON CONTROL PANEL BOARD

22. Follow Box Top Illustration or color indications. Or follow these suggestions for coloring parts:
 MASK and HAIR - BLACK
 CAPE - YELLOW
 SHIRT and GLOVES - GREEN
 VEST - RED
 TRUNKS and BOOTS - GREEN
 BASE and CONTROL PANEL - GRAY
 TEST TUBES - RED
 ELECTRONIC BOXES - DARK GRAY
 LEVERS - RED
 GUARD RAIL - BLACK

